



IMPRESSA F8 – Quick Reference Guide



The 'IMPRESSA F8 Instructions for Use' together with these short instructions 'IMPRESSA F8 – Quick Reference Guide' has been awarded the seal of approval by the independent German Technical Inspection Agency, TÜV SÜD, due to its easy-to-understand style, its thoroughness and coverage of safety aspects.

IMPRESSA F8 – Quick Reference Guide




These short instructions do not replace the ‘IMPRESSA F8 Instructions for Use’. Make sure you read and observe the safety information and warnings first in order to avoid hazards.

Rinsing the machine

You can initiate the rinse operation manually at any time.



Precondition: ‘Please select product’ is displayed.

- ▶ Place a receptacle under the coffee spout.
- P** ▶ Press the P button.
‘Maintenance status’ (‘1/7’)
-  ▶ Turn the Rotary Switch until ‘Maintenance status’ (‘2/7’) is displayed.
- ▶ Press the ‘Rinse the coffee system’ button to initiate the rinse operation.
‘Machine is rinsing’, water flows out of the coffee spout.
The rinse stops automatically. ‘Please select product’ appears on the display.






Rinsing the fine foam frother

i This chapter applies to the **professional fine foam frother** and the **fine foam frother**.

After each milk preparation, the IMPRESSA prompts you to perform a cappuccino rinse.



Precondition: ‘Rinse the milk system’ is displayed.

- ▶ Place a receptacle under the fine foam frother.
-  ▶ Press the Rotary Switch.
‘Switch open’
-  ▶ Turn the switch to the  position.
‘Milk system is being rinsed’, the fine foam frother is rinsed.
The rinse stops automatically. ‘Switch close’ appears on the display.
-  ▶ Turn the switch to the  position.
‘Please select product’ appears on the display.

Cleaning the fine foam frother

i This chapter applies to the **professional fine foam frother** and the **fine foam frother**.

To ensure that the fine foam frother always works properly, you must clean it **daily** when you have been preparing milk. Your IMPRESSA will **not** prompt you to clean the fine foam frother.

CAUTION If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

i JURA milk system cleaner is available from specialised dealers.

Precondition: 'Please select product' is displayed.

P ▶ Press the P button.

'Maintenance status' ('1/7')

▶ Press the 'Cappuccino cleaning' button.

▶ Press the 'Start' button.

▶ Press the 'Start' button again.

'Cleaner for Cappuccino'

▶ Remove the milk pipe from the milk container or carton.

▶ Pour 250 ml of fresh water into a receptacle and add one capful of milk system cleaner.

▶ Immerse the milk pipe in the receptacle.

▶ Place a receptacle under the fine foam frother.

▶ Press the 'Next' button.

'Cappuccino cleaning'

As soon as the machine has heated up, 'Switch open' appears.



▶ Turn the switch to the ⚡ position.

'Cleaning Cappuccino' appears and the fine foam frother and the milk pipe are cleaned.

'Switch close'



▶ Turn the switch to the Ⓢ position.

'Water for Cappuccino'



▶ Rinse the receptacle thoroughly, fill it with 250 ml of fresh water and immerse the milk pipe in the water.

▶ Empty the other receptacle and place it under the fine foam frother once more.

▶ Press the 'Next' button.


'Switch open'



- ▶ Turn the switch to the  position.
'Cleaning Cappuccino', the fine foam frother and the milk pipe are rinsed with fresh water.
'Switch close'
- ▶ Turn the switch to the  position.
'Please select product' appears on the display.

Dismantling and rinsing the fine foam frother

To make sure the fine foam frother works properly, and in the interests of hygiene, it must be dismantled and rinsed **daily** if you have been preparing milk. Your IMPRESSA will not prompt you to dismantle and rinse the frother.

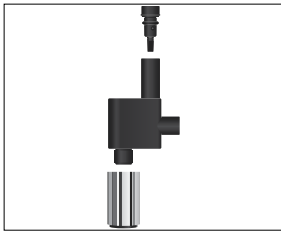

- ▶ Remove the milk pipe and rinse it thoroughly under running water.
 - ▶ Carefully remove the fine foam frother from the Connector System[®] by twisting slightly.
 - ▶ Dismantle the fine foam frother into its individual parts.
 - ▶ Rinse all the parts of the fine foam frother thoroughly under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in JURA milk system cleaner and then rinse them thoroughly.
 - ▶ Re-assemble the fine foam frother.
- i** Ensure that all individual parts are correctly and firmly connected to ensure optimum operation.
- ▶ Firmly attach the fine foam frother to the Connector System[®].

Inserting and activating the filter

Your IMPRESSA no longer has to be descaled if you are using the CLARIS Blue filter cartridge. If you did not activate the filter cartridge the first time you used the machine, you can do this now as follows.

- i** Perform the 'inserting the filter' operation without any interruptions. This will ensure that your IMPRESSA always produces its best.

Precondition: 'Please select product' is displayed.

- P** ▶ Press the P button.
'Maintenance status' ('1/7')
- ▶ Turn the Rotary Switch until 'Maintenance settings' ('6/7') is displayed.



- ▶ Press the 'Use filter' button.
'Use filter'
- ▶ Press the 'Active' button.
- ▶ Press the 'Save' button.
'Saved' appears briefly on the display.
'Insert filter'
- ▶ Remove and empty the water tank.
- ▶ Open the filter holder.
- ▶ Remove the CLARIS Blue filter cartridge from the Welcome Pack.
- ▶ Insert the CLARIS Blue filter cartridge into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.



- i** After two months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.

- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
- ▶ Place a receptacle (at least 300 ml) under the fine foam frother.
- ▶ Press the 'Next' button.
'Switch open'





-  ▶ Turn the switch to the  position.
'Filter is being rinsed', water flows out of the fine foam frother.

- i** You can interrupt rinsing of the filter at any time. To do this, turn the switch clockwise. Turn the switch anticlockwise to continue rinsing the filter.

- i** The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 300 ml. 'Switch close' appears on the display.

-  ▶ Turn the switch to the  position.
'Please select product' appears on the display. The filter is now activated.

Changing the filter

- i** After 50 litres of water have flowed through, the filter will cease to work. Your IMPRESSA will automatically prompt you to change the filter.
- i** After two months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.
- i** If the CLARIS Blue filter cartridge is not activated in programming mode, you will not be prompted to change the filter.
- i** CLARIS filter cartridges are available from specialised dealers.

Precondition: 'Change the filter' is displayed.

P ▶ Press the P button.

'Maintenance status' ('1/7')

▶ Press the 'Change the filter' button.

'Change the filter'

▶ Press the 'Start' button.

▶ Press the 'Start' button again.

'Change filter'

▶ Remove and empty the water tank.

▶ Open the filter holder and remove the old CLARIS Blue filter cartridge.

▶ Insert a new CLARIS Blue filter cartridge into the water tank, exerting slight pressure.

▶ Close the filter holder. It will click into place audibly.

▶ Fill the water tank with fresh, cold water and reinsert the tank.

▶ Place a receptacle (at least 300 ml) under the fine foam frother.

▶ Press the 'Next' button.

'Switch open'



▶ Turn the switch to the ↓ position.

'Filter is being rinsed', water flows out of the fine foam frother.

- i** You can interrupt rinsing of the filter at any time. To do this, turn the switch clockwise. Turn the switch anticlockwise to continue rinsing the filter.



- i** The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 300 ml. 'Switch close' appears on the display.

- i** ▶ Turn the switch to the **Ⓛ** position.
'Please select product' appears on the display.

Cleaning the machine

After 200 preparations or 80 switch-on rinses, the IMPRESSA will prompt you to clean it.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

- i** The cleaning programme lasts approximately 20 minutes.
- i** Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from specialised dealers.

Precondition: 'Clean machine' is displayed.

- P** ▶ Press the P button.
'Maintenance status' ('1/7')
- ▶ Press the 'Clean' button.
'Clean'
- ▶ Press the 'Start' button.
- ▶ Press the 'Start' button again.
'Empty grounds'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Press the Rotary Switch'
- ▶ Place a receptacle under the coffee spout.
- Ⓛ** ▶ Press the Rotary Switch.
'Machine is being cleaned', water flows out of the coffee spout.
The operation is interrupted, 'Add cleaning tablet'.
- ▶ Open the cover of the filler funnel for ground coffee.





- ▶ Insert a JURA cleaning tablet into the filler funnel.
- ▶ Close the cover of the filler funnel.
‘Press the Rotary Switch’
- ▶ Press the Rotary Switch.
‘Machine is being cleaned’, water flows out of the coffee spout several times.
The operation stops automatically.
‘Empty grounds’
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
‘Please select product’ appears on the display. Cleaning is now complete.

Descaling the machine

The IMPRESSA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

- ⚠ CAUTION** If the descaling agent comes into contact with the skin or eyes, this can cause irritation.
- ▶ Avoid contact with the skin or eyes.
 - ▶ Rinse off the descaling agent with clean water. Should you get any descaling agent in your eye, see a doctor.



- CAUTION** If the wrong descaling agent is used, the machine could be damaged and/or traces could be left behind in the water.
- ▶ Use only original JURA maintenance products.


- CAUTION** If the descaling operation is interrupted, there may be damage to the machine.
- ▶ Allow the descaling programme to run to the end.

- CAUTION** If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out.
- ▶ Clean up any splashes immediately.






- i** The descaling programme lasts approximately 40 minutes.
- i** JURA descaling tablets are available from specialised dealers.
- i** If you use a CLARIS Blue filter cartridge and this is activated, you will not be prompted to descale.

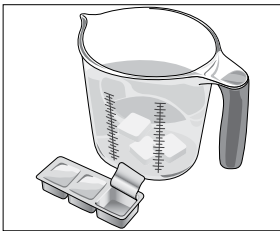Precondition: 'Decalcify machine' is displayed.

- P**
- ▶ Press the P button.
'Maintenance status' ('1/7')
 - ▶ Press the 'Descale' button.
'Descale'
 - ▶ Press the 'Start' button.
 - ▶ Press the 'Start' button again.
'Empty drip tray'
 - ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Agent in tank'
 - ▶ Remove and empty the water tank.
 - ▶ Completely dissolve the contents of one blister (3 JURA descaling tablets) in a receptacle holding 500 ml of lukewarm water. This may take several minutes.
 - ▶ Pour the solution into the empty water tank and insert it into the machine.
'Switch open'
 - ▶ Carefully remove the fine foam frother from the Connector System® by twisting slightly.
 - ▶ Place a receptacle (at least 500 ml) under the Connector System®.
 - ▶ Turn the switch to the  position.
'Machine is being descaled', water flows out of the Connector System® several times.
The operation is interrupted, 'Switch close'.
 - ▶ Turn the switch to the  position.
'Machine is being descaled', the descaling operation is continued.
The operation is interrupted, 'Empty drip tray'.
 - ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
'Fill water tank.'
 - ▶ Empty the receptacle and place it under the Connector System® and the coffee spout.
 - ▶ Remove the water tank and rinse it thoroughly.
 - ▶ Fill the water tank with fresh, cold water and reinsert the tank.
'Switch open'



IMPRESSA F8 – Quick Reference Guide

-  ▶ Turn the switch to the  position.
 ‘Machine is being descaled’, the descaling operation is continued.
 The operation is interrupted, ‘Switch close’.
-  ▶ Turn the switch to the  position.
 ‘Machine is being descaled’, the descaling operation is continued.
 The operation is interrupted, ‘Machine is being descaled’.
 Water flows out of the coffee spout.
 ‘Empty drip tray’
 - ▶ Refit the fine foam frother on the Connector System®.
 - ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
 ‘Please select product’ appears on the display. Descaling is now complete.
-  If the descaling operation stops unexpectedly, rinse the water tank thoroughly.